


## JFS 381U

### JFS 381U

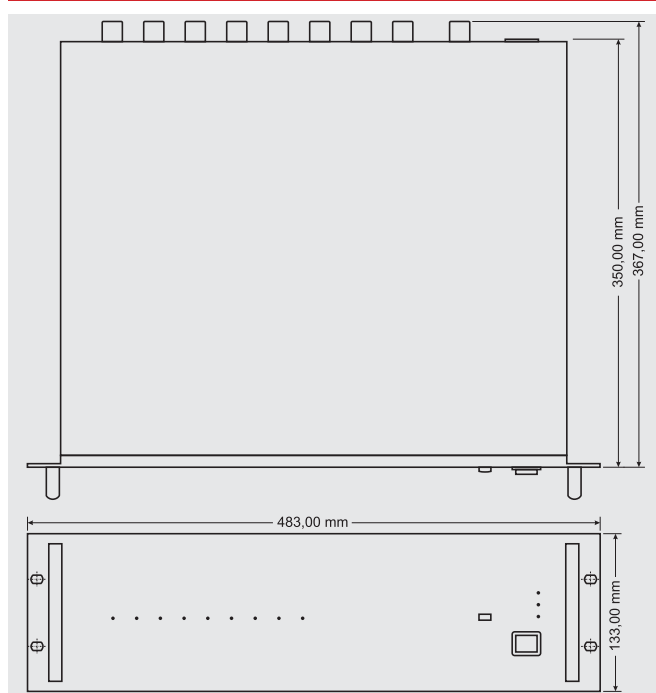

### Spare amplifier manager

This device will switch automatically to the spare amplifier in case of main amplifier is out of order. If this device is connected with DP amplifiers with FD 20 card installed, it can monitor complete zone way and conditions of the both zone and amplifier.

### Technical datas

- LED indicator will be flashed and buzzer will make sound
- AC/DC 24V operation
- equipment operation and fault status report to JCU-160 (E/M Check Unit) - „U type“ only
- capacity - 8 Main Amplifiers, 1 Stand-by Amplifier
- audio input / AMP INPUT 1:1
- AMP output / SPK LINE 1:1

- frequency response less than - 0.5 dB (20 Hz - 20 kHz)
- signal to Noise ratio More than 86 dB
- T.H.D-Less than 0.005 %
- cross talk More than 80 dB
- power Consumption-12 W
- weight 7 kg

Cat. nr.: 271050

pc